

Тиристорный модуль

JUMO TUA 202





По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72
Астана +7(7172)727-132
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41

Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78


Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Technical data

Voltage supply, load current

Code	Voltage supply for control electronics = max. load voltage	Fan specifications Type 709061/X-0X-250...
024	AC 24V -20%...+15%, 45 ...63 Hz	AC 24V/30VA
042	AC 42V -20%...+15%, 45 ...63 Hz	AC 24V/30VA
115	AC 115V -20%...+15%, 45 ...63 Hz	AC 115V/30VA
230	AC 230V -20%...+15%, 45 ...63 Hz	AC 230V/30VA
265	AC 265V -20%...+15%, 45 ...63 Hz	AC 230V/30VA
400	AC 400V -20%...+15%, 45 ...63 Hz	AC 230V/30VA
460	AC 460V -20%...+15%, 45 ...63 Hz	AC 230V/30VA
500	AC 500V -20%...+15%, 45 ...63 Hz	AC 230V/30VA
Load current $I_{L\ rms}$	AC 20, 32, 50, 100, 150, 200, 250A	
Load type	Resistive and resistive/inductive loads	
Control section power consumption	max. 40 VA	

Analog inputs

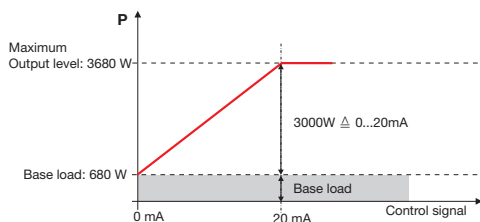Control signal	0(4) ... 20mA	$R_i = 50\ \Omega$
	0(2) ... 10V	$R_i = 25\ k\Omega$
	0(1) ... 5V	$R_i = 25\ k\Omega$
Default set point value	Via standard signals (current, voltage) or interface	
	Base load:	Output as minimum control value
	Maximum control value:	Output as maximum control value
Example P control:		

Binary inputs

Binary input 1, 2	For connection to potential-free contact or optocoupler, voltage proof up to DC 12V
-------------------	---

Binary outputs, actual value output

Relay (changeover contact) without contact suppression	150000 switching actions at a contact rating of 3A/230V 50Hz (resistive load)
Optocoupler output	$I_{Cmax} = 2\ mA$, $U_{CE0max} = 32\ V$
Actual value output	Switched off as standard. For standard signal, voltage: 0 ... 10V, 2 ... 10V, 0 ... 5V to 1 ... 5V For standard signal, current: 0 ... 20mA to 4 ... 20mA (burden max. 500Ω) Depending on the device type, the output of various internal measuring values such as load current, load voltage or power is possible.

Thyristor firing request:	setpoint specification Current input (current proof up to 25mA)	setpoint specification Voltage input (voltage proof up to DC 32V)	setpoint specification Binary input1, 2 (voltage proof up to DC 32V)	via Interface
continuous	The power controller provides the power for the load continuously depending on the default setpoint value.		-	possible
logic (Solid State Relais SSR)	The power controller acts like a switch and provides the power by either switching ON or OFF. The switching level is always in the middle of the selected input range. At 4 to 20mA it is 12mA, at 0 to 10V it is 5V.		OFF logic level „0“ = 0 to +0,8V; ON logic level 1 = +2 to 3,3V	possible

General characteristic data

Circuit options	- Three-phase economy circuit in master/slave operation
Operating modes	- Impulsgruppenbetrieb für ohmsche Last oder Trafolast mit Softstart
Special features	- Dual energy management - Burst-firing mode with softstart
Subordinate control loop	U ² control as standard Can be switched over to U, I, I ² , P control depending on device type
Electrical connection	For type 709062/X -0X-020... Control and load leads are connected via screw terminals. For type 709062/X -0X-032... Control leads are connected via screw terminals and load leads via cable lugs DIN 46235 and DIN46234 or tubular cable lugs.
Operating conditions	The controller is designed as a panel-mounting device according to: EN 50 178, pollution degree 2, overvoltage category Ü III
Electromagnetic compatibility	According to DIN 61326-1 Emitted interference: Class B Interference resistance: Industrial requirements
Protection rating	All device types IP20 according to EN 60 529
Protection rating	Protection rating I, with isolated control circuitry for connection to SELV circuits
Permissible ambient temperature range	35°C with forced air cooling (250A controller) 0 ... 45°C with natural air cooling (extended temperature range class 3K3 according to EN 60 721-3-3) At higher temperatures, operation with reduced type current is possible. (from 45°C with type current -2%/°C)
Permissible storage temperature range	-30 ... +70°C (1K5 according to EN 60 721-3-1)
Cooling	- Natural convection up to a load current of 200A - For a load current of 250A, forced convection with built-in ventilator
Environmental performance	Rel. humidity ≤ 85 % annual average, no condensation 3K3 according to EN 60 721
Installation position	Vertical
Test voltage	According to EN 50178
Creepage distances	8 mm between supply current circuit and SELV circuits for type 709062/X -0X-020... 12.7 mm between supply current circuit and SELV circuits from type 709062/X -0X-032... SELV = Separate Extra Low Voltage (safe low voltage)
Case	Plastic, flammability class UL94 V0, color: Cobalt blue RAL 5013
Power dissipation	The power dissipation can be calculated using the following empirical formula: $P_v = 2 \times (20W + 1.3V \times I_{Load} A)$
Maximum temperature of the cooling body	110°C








Type (Load current)	20A	32A	50A	100A	150A	200A	250A
Weight	approx. 2.2 kg	approx. 4.2 kg	approx. 5.4 kg	approx. 7.6 kg	approx. 17 kg	approx. 19 kg	approx. 20.4 kg

Approvals/approval marks


Approval mark	Testing agency	Certificates / certification numbers	Inspection basis	Valid for
c UL us	Underwriters Laboratories	submitted	UL 508	All device Versions

Display and measuring accuracy

All specifications refer to the controller nominal data.

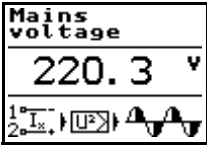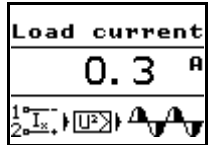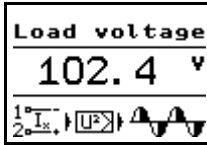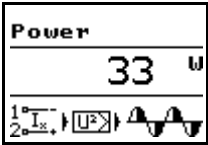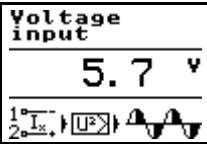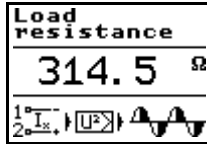
Supply voltage: ± 2,5% 	Load current: ± 1% 	Load voltage: ± 1% 	Power: ± 2% 
Analog input Voltage/current: ± 1% 	Analog output Voltage/current: ± 1% 	Load resistance: ± 2% (for resistive load) 	

Permissible load current depending on the ambient temperature and installation height

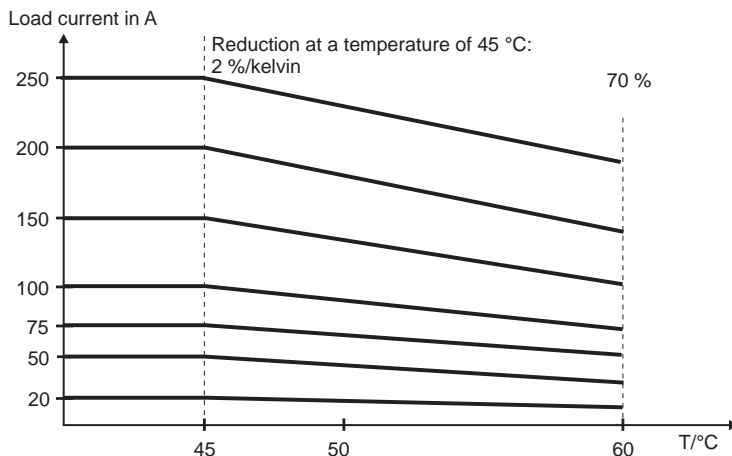

Note:


At a device temperature of 105°C, the load current is reduced for each degree of temperature increase. The power controller current is switched off completely at a device temperature of >115°C.

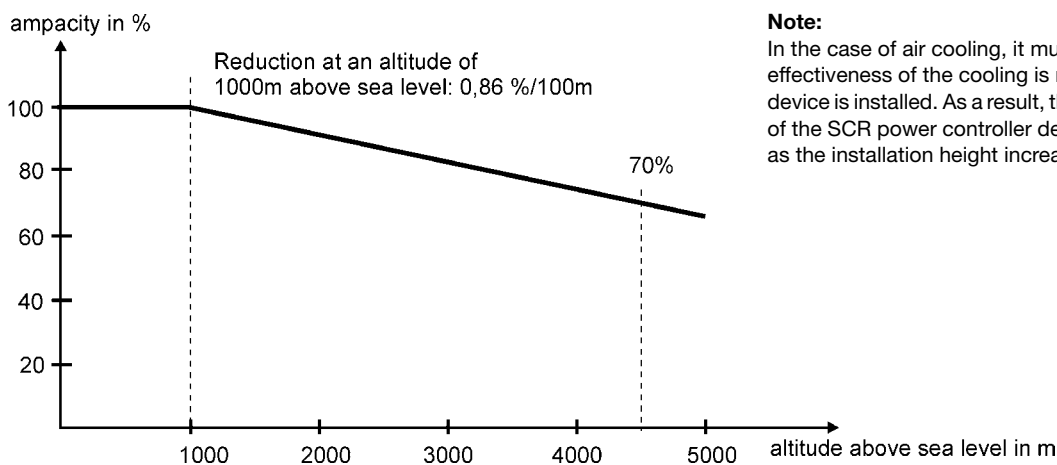

Note:

In the case of air cooling, it must be noted that the effectiveness of the cooling is reduced the higher up the device is installed. As a result, the current carrying capacity of the SCR power controller decreases with such a cooler as the installation height increases as shown in the image.

Electrical isolation


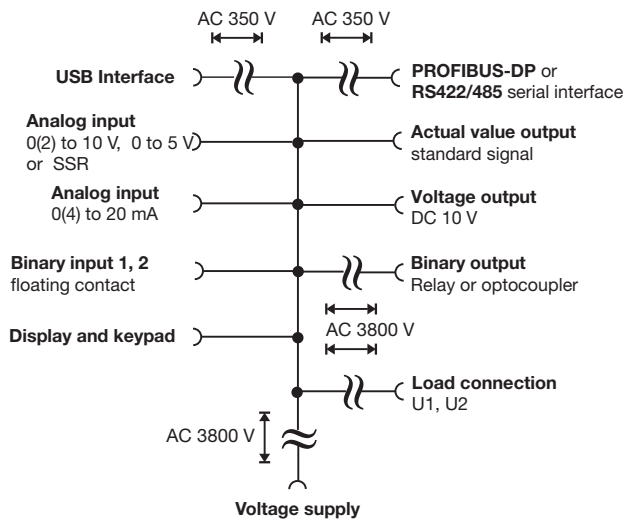


Display, operation and connection elements




Legend	Remark	Fig.
1	LED Power (green) is lit when the voltage supply is connected	
2	LCD display with white background lighting (96 x 64 pixels). (no LCD display on Slave device) The info line at the bottom of the display indicates current settings and error messages.	
3	The LED Fuse (red) is lit when the semi-conductor fuse is blown	
4	LED K1 (yellow) fault signal output	
5	Keys: Increase value / parameter up Decrease value / parameter down Abort / one level back Programming / one level lower (no Keys on Slave device)	
6	USB setup interface Konfiguration data is set on the left device and will be transmitted automatically via 1:1 Patch cable to the right device.	
7	Release clip for removing the plastic case (push to the right)	

Dimensions




Type 709062/X-0X-20A-XXX-XXX-XX-25X

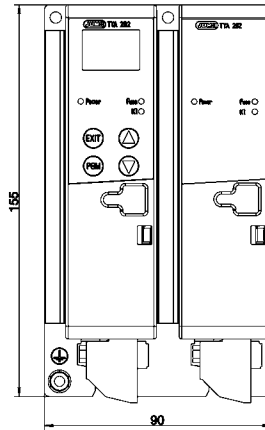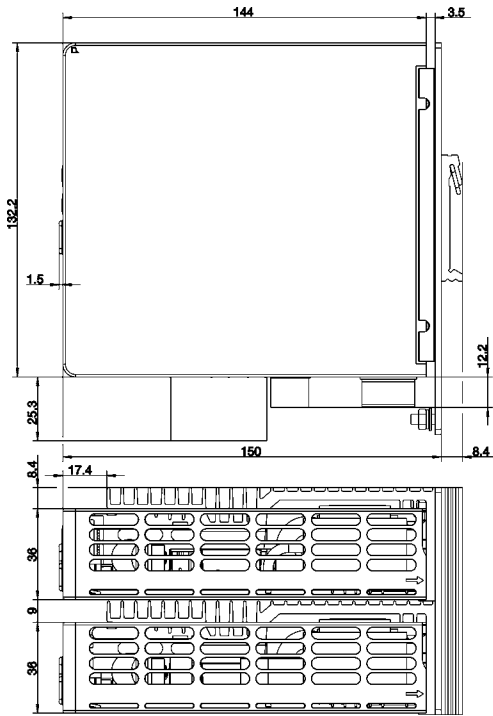




Type 709062/X-0X-032-XXX-XXX-XX-25X

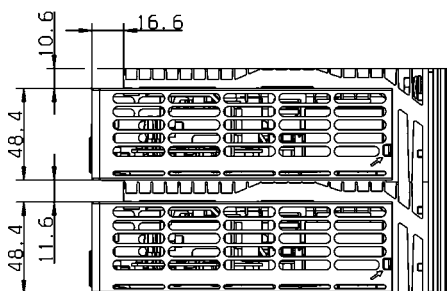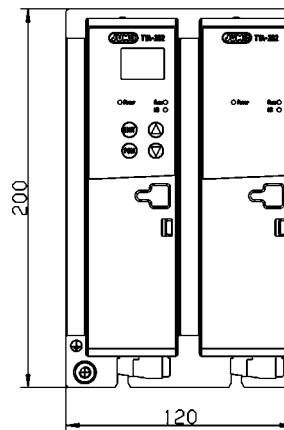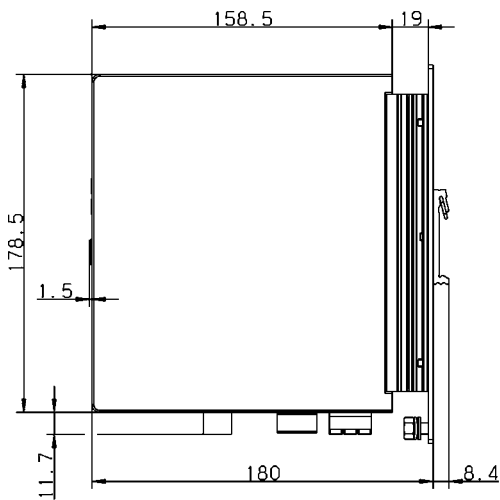




Type 709062/X-0X-050-XXX-XXX-XX-25X

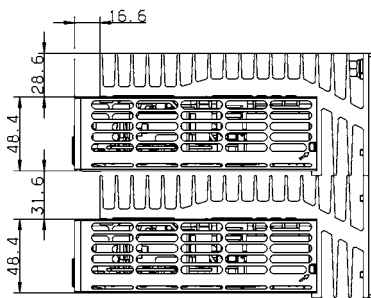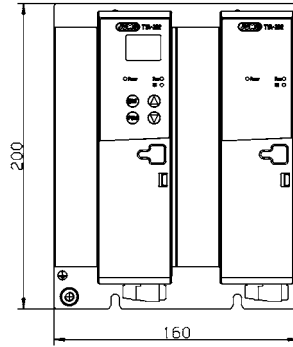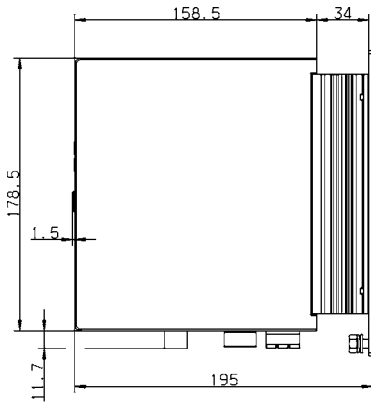

Type 709062/X-0X-100-XXX-XXX-XX-25X

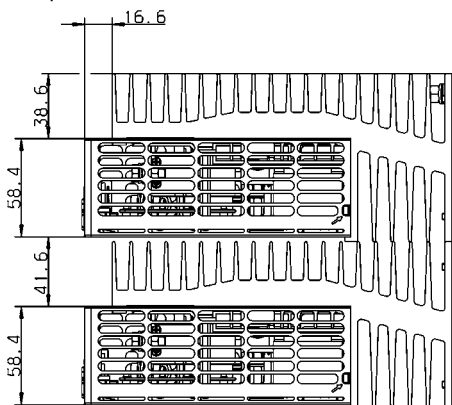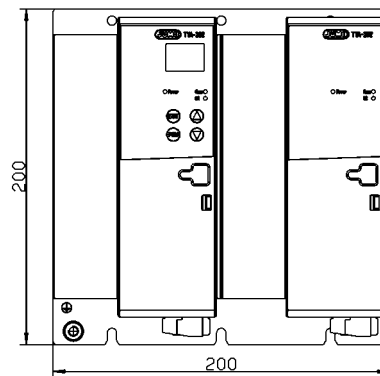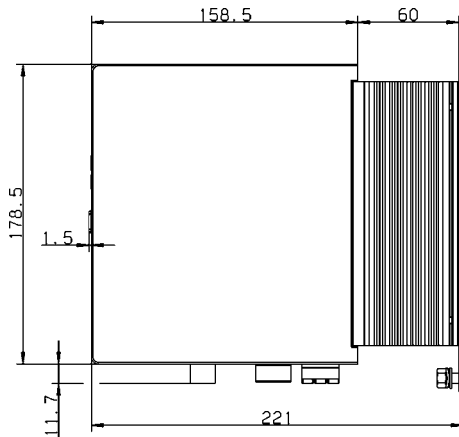


Type 709062/X-0X-150-XXX-XXX-XX-25X
 Type 709062/X-0X-200-XXX-XXX-XX-25X,

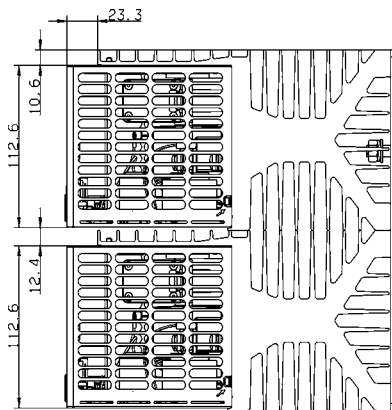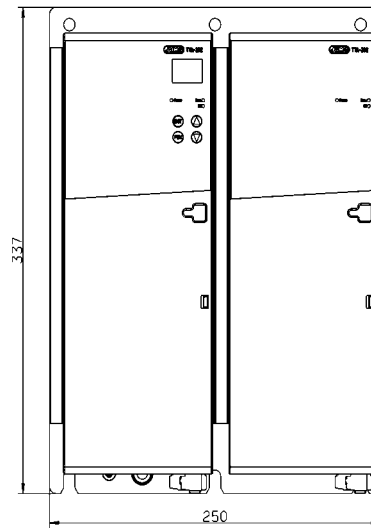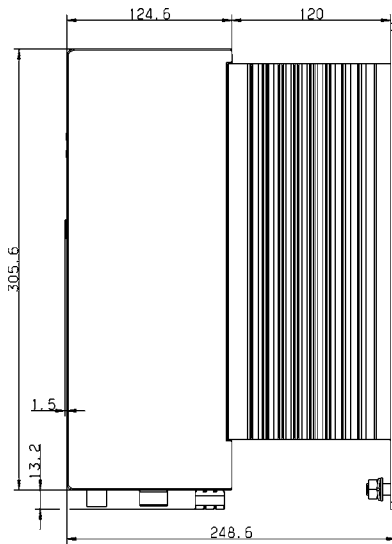

Clearances (all types)

- Allow a clearance of 10 cm from the floor.
- Allow a clearance of 15 cm from the ceiling.
- When fitted next to each other, no spacing between the devices is required.

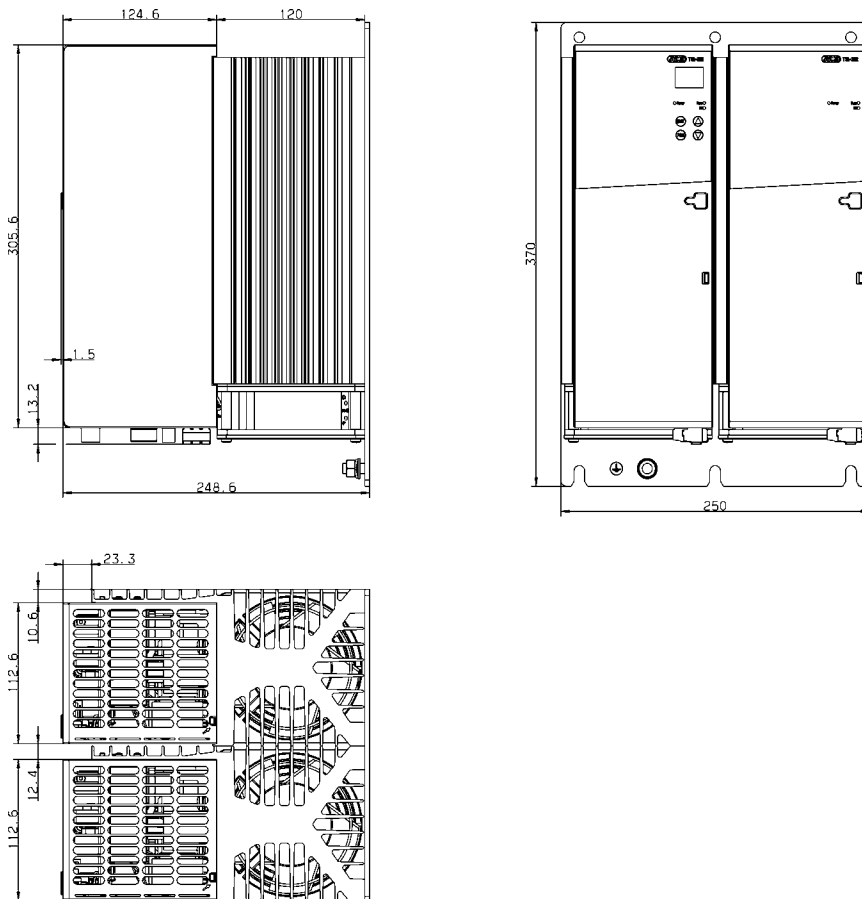
Type 709062/X-0X-250-XXX-XXX-XX-25X

Maximum tightening torques for screw connections

Terminals	Version	Tightening torque
For all types X2_1 numbers 1...6, X2_2 numbers 7...12 and modbus RS422/485 (Terminals 16, 17, 18, 19)	Plug-in screw terminals (slotted screws)	0.25 Nm
X3 numbers 13, 14, 15	Plug-in screw terminals (slotted screws)	0.5 Nm
Type 709062/X-0X-020... Clamping block U1, U2, N/L2, V, L1 Ground terminal PE:	Plug-in screw terminals (recessed head screws) M4 headless setscrew with nut	0.6 Nm 3 Nm
Type 709062/X-0X-032 and type 709062/X-0X-050... U1, U2: Clamping block N/L2, V, L1 Ground terminal PE:	M6 recessed head screws Plug-in screw terminals (slotted screws) M6 headless setscrew with nut	5Nm 0.5Nm 5Nm
Type 709062/X-0X-100... U1, U2: Clamping block N/L2, V, L1 Ground terminal PE:	M6 hexagon screw, width across flats 10 mm Plug-in screw terminals (slotted screws) M6 headless setscrew with nut	5Nm 0.5Nm 5Nm
Type 709062/X-0X-150..., 709062/X-0X-200 and Type 709062/X-0X-250... U1, U2: Clamping block N/L2, V, L1 Ground terminal PE:	M8 hexagon screw, width across flats 13 mm Plug-in screw terminals (slotted screws) M8 headless setscrew with nut	12 Nm 0.5Nm 12 Nm
Typ 709061/X-0X-250... X14 numbers 20, 21	Plug-in screw terminals (slotted screws)	0,5Nm

Connection diagram

The connection diagram contained in the data sheet provides a first information about the connection possibilities. Only use the installation instructions or the operating manual for the electrical connection. The knowledge and the correct technical execution of the safety information/instructions contained in these documents are prerequisite for installation, electrical connection and commissioning/start-up as well as for safety during operation.

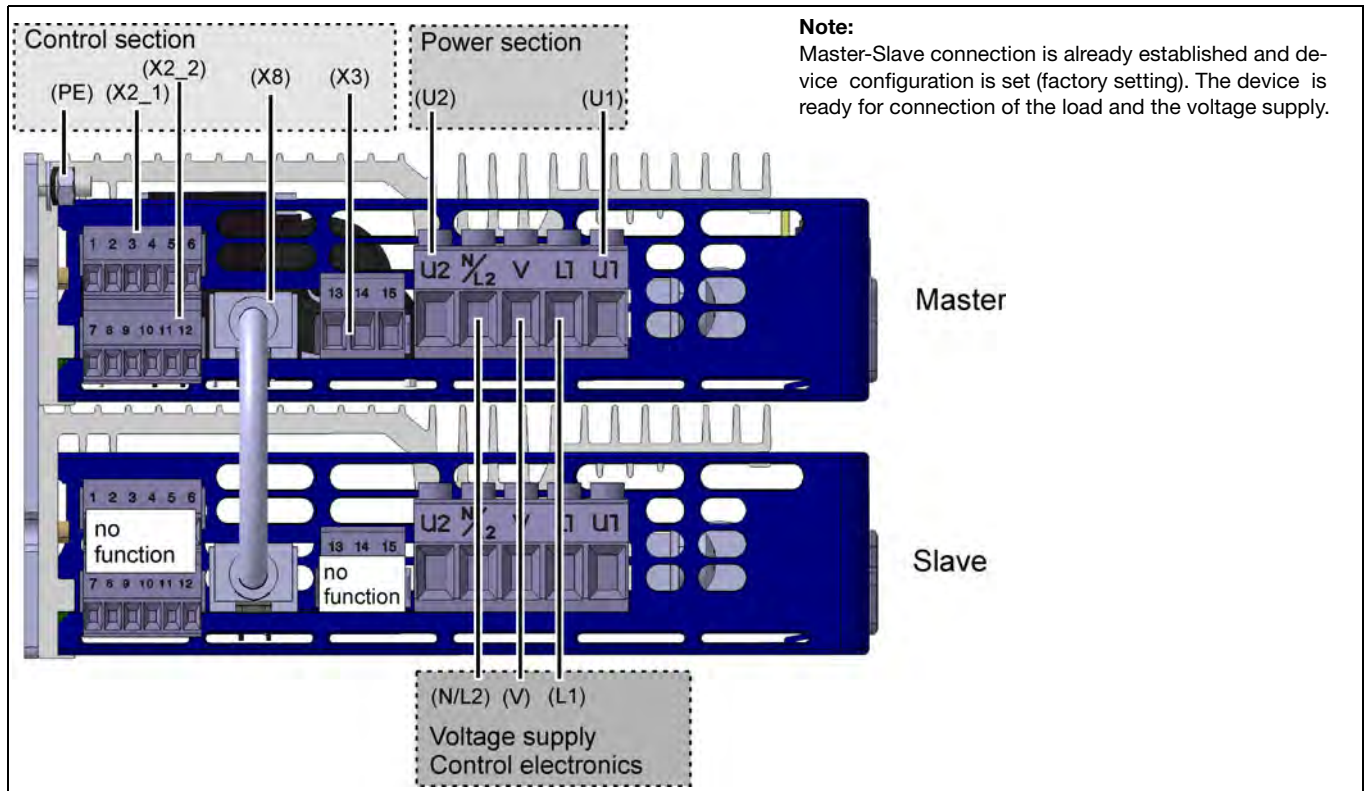Typ 709062/X-0X-20-XXX-XXX-XX-25X



Power section

Connection for	screw terminals control section/ power section	Detail
Voltage supply Control electronics (is the same as the max. Load voltage of the ordered Type, see order matrix)	L1 N/L2 V	$L1 \text{ --- } \circ L1$ $N(L2) \text{ --- } \circ N(L2)$ $V \text{ --- } \circ V$
Protective earth	PE	$PE \text{ --- } \circ PE$
Load connection	U1 U2	$L1 \text{ --- } \circ U1$ $N/L2 \text{ --- } \circ U2$
Fan X14	20, 21 (only types with load current 250A)	

Control section

Connection for	Screw terminal X2_1	Detail
Setpoint value input current	1 2	$- \text{ --- } \circ 1$ $I_x \text{ --- } \circ 2$ $+ \text{ --- } \circ 2$
Setpoint value input voltage	3 (GND) 4	$- \text{ --- } \circ 3$ $U_x \text{ --- } \circ 4$ $+ \text{ --- } \circ 4$
Output DC 10V fixed voltage	5	
Ground potential	6 (GND)	

Example for external manual mode via potentiometer

Connection for	Screw terminal X2_2	Detail
Firing-pulse inhibit (voltage proof up to DC 32V) OFF logic level „0“ = 0 to +0,8V; ON logic level 1 = +2 to 3,3V	8	
Binary input1 (voltage proof up to DC 32V) OFF logic level „0“ = 0 to +0,8V; ON logic level 1 = +2 to 3,3V	9	
Binary input2 (voltage proof up to DC 32V) OFF logic level „0“ = 0 to +0,8V; ON logic level 1 = +2 to 3,3V	10	
GND	7, 11	Ground
Analog output for different internal power controller variables	12	

Master-slave connection

Connection	RJ45 connector X8
for Master-Slave-operation	The 1:1 Patch cable (included in the scope of delivery) has to be connected for correct operation.


Fault signal output

Connection for	Screw terminal X3	Detail
Relay SPDT (changeover contact) or optocoupler	13 n.o.make contact or collector	
	14 n.c. break contact	
	15 pole or emitter	



Interfaces (Option)

Connection	Modbus	RS422	RS485
Plug-in screw terminals on the underside of the case	19	TxD (-)	RxD/TxD B(-)
	18	TxD (+)	RxD/TxD A(+)
	17	RxD (-)	-
	16	RxD (+)	-


(RS422/485 Modbus)

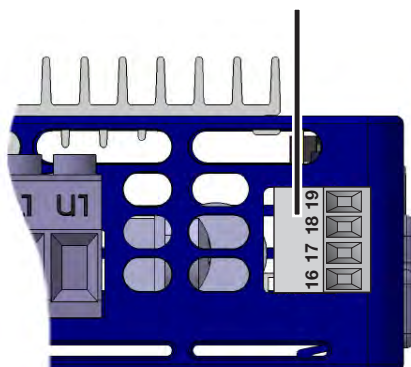


Connection	PROFIBUS-DP
SUB-D 9-pin socket connector (on the front panel)	3 A(+)
	8 B(-)
	6 VCC
	5 GND
	Shielding

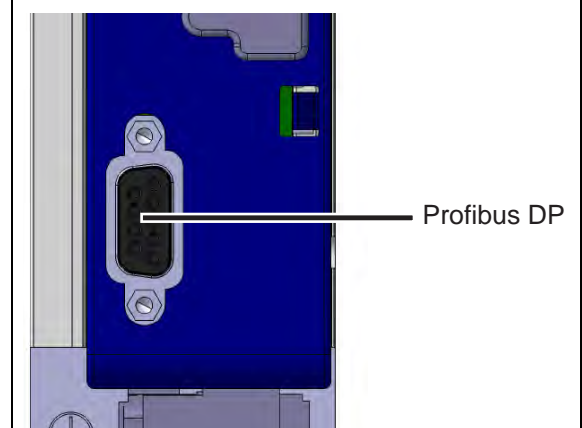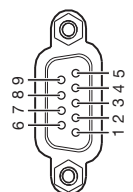


Typ 709062/X-0X-032-XXX-XXX-XX-25X

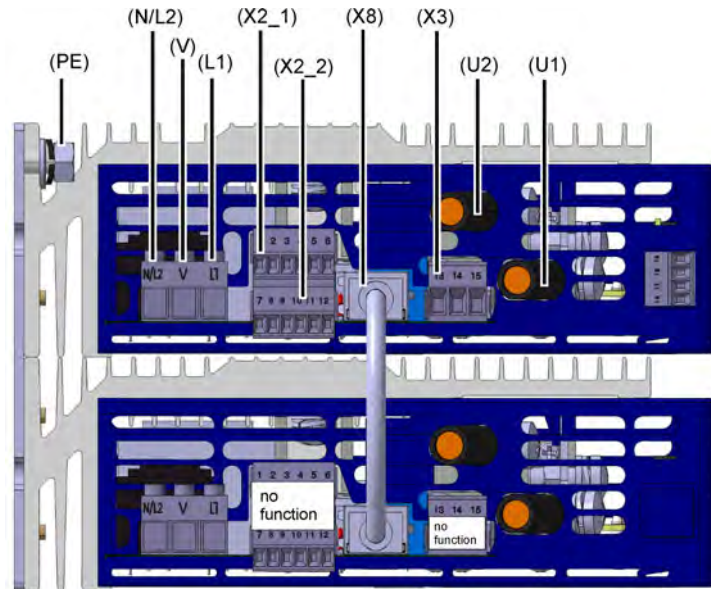


Typ 709062/X-0X-050-XXX-XXX-XX-25X

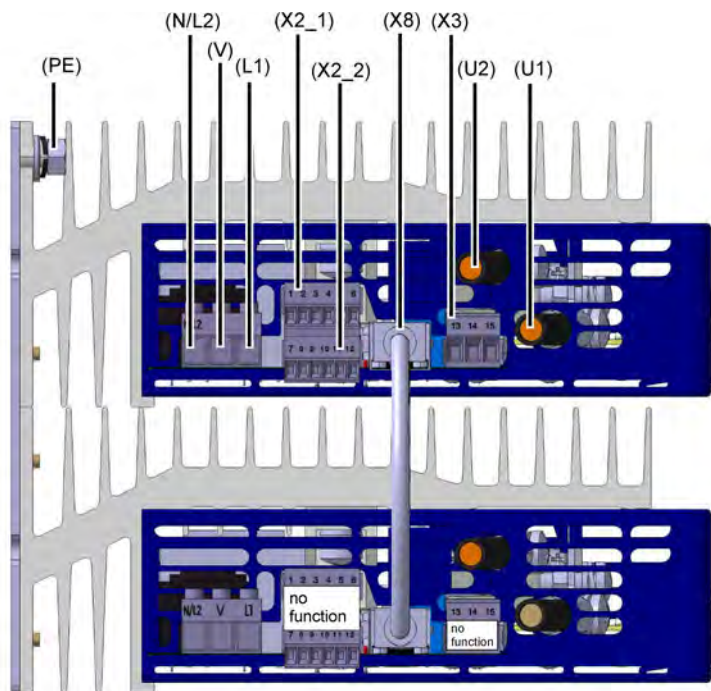


Typ 709062/X-0X-100-XXX-XXX-XX-25X

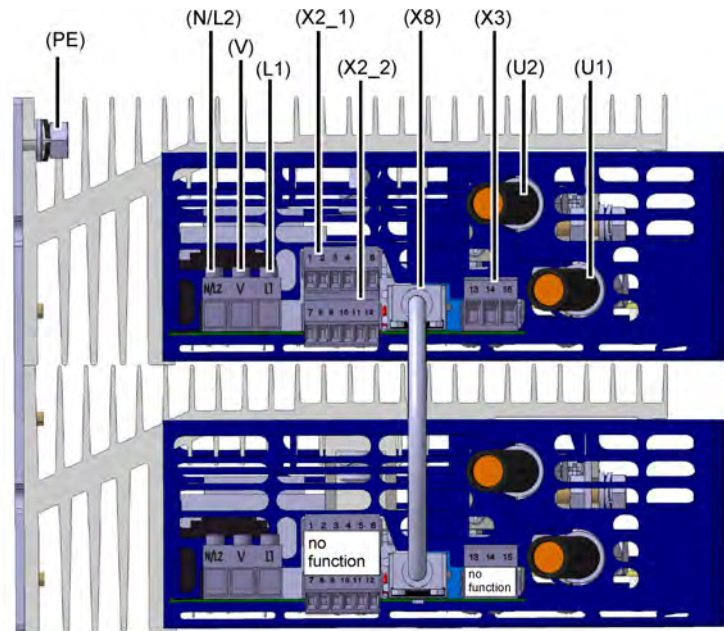

**Typ 709062/X-0X-150-XXX-XXX-XX-25X,
Typ 709062/X-0X-200-XXX-XXX-XX-25X**

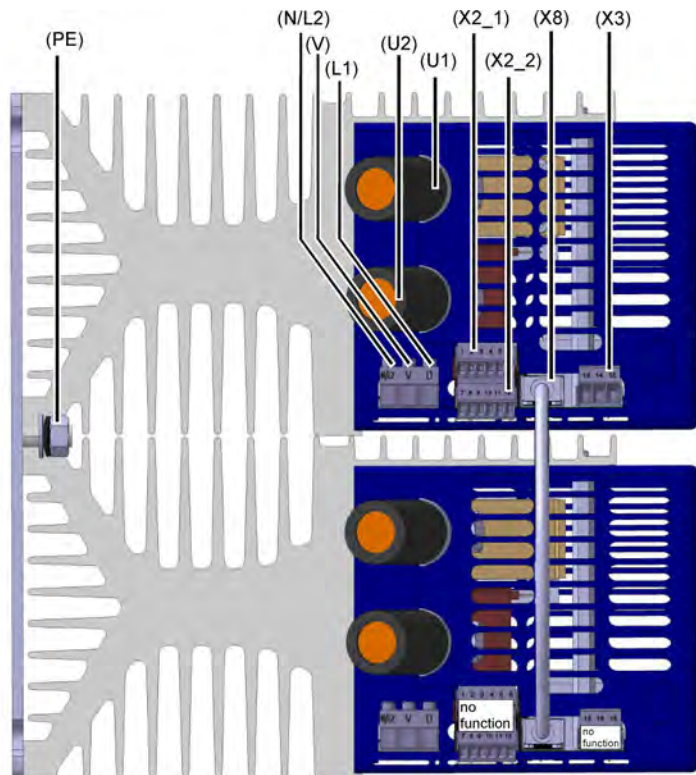

Typ 709062/X-0X-250-XXX-XXX-XX-25X

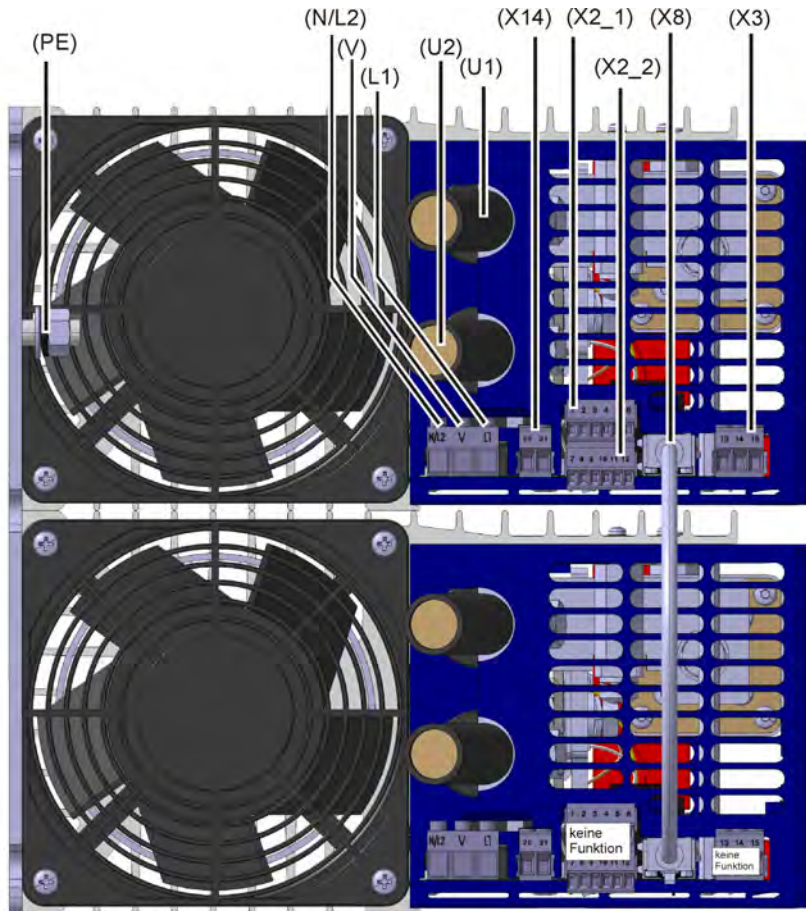

Example:

Voltage supply of the fan in case of type 709062/X-0X-250-XXX-400-XX-25X

Depending on the load voltage, the fan terminal X14 must be supplied with the voltage specified below.


The lead protection must be between 2 A and a maximum of 5 A.

The fan is temperature-controlled, switches on automatically when the device temperature reaches 85 °C, and remains in operation until the device temperature falls below 70 °C.

Load voltage on the power controller	Tolerances	Fan specifications
Load voltage AC 24V	-20 to +15 %, 45 to 63 Hz	AC24V / 30VA
Load voltage AC 42V	-20 to +15 %, 45 to 63 Hz	
Load voltage AC115V	-15 to + 6 %, 45 to 63 Hz	AC 115V / 30VA
Load voltage AC230V	-15 to + 6 %, 45 to 63 Hz	AC 230V / 30VA
Load voltage AC265V		
Load voltage AC400V		
Load voltage AC460V		
Load voltage AC500V		

Wiring

Three-phase economy circuit Master-Slave for resistive loads in star-, delta connection or transformer loads (resistive-inductive)

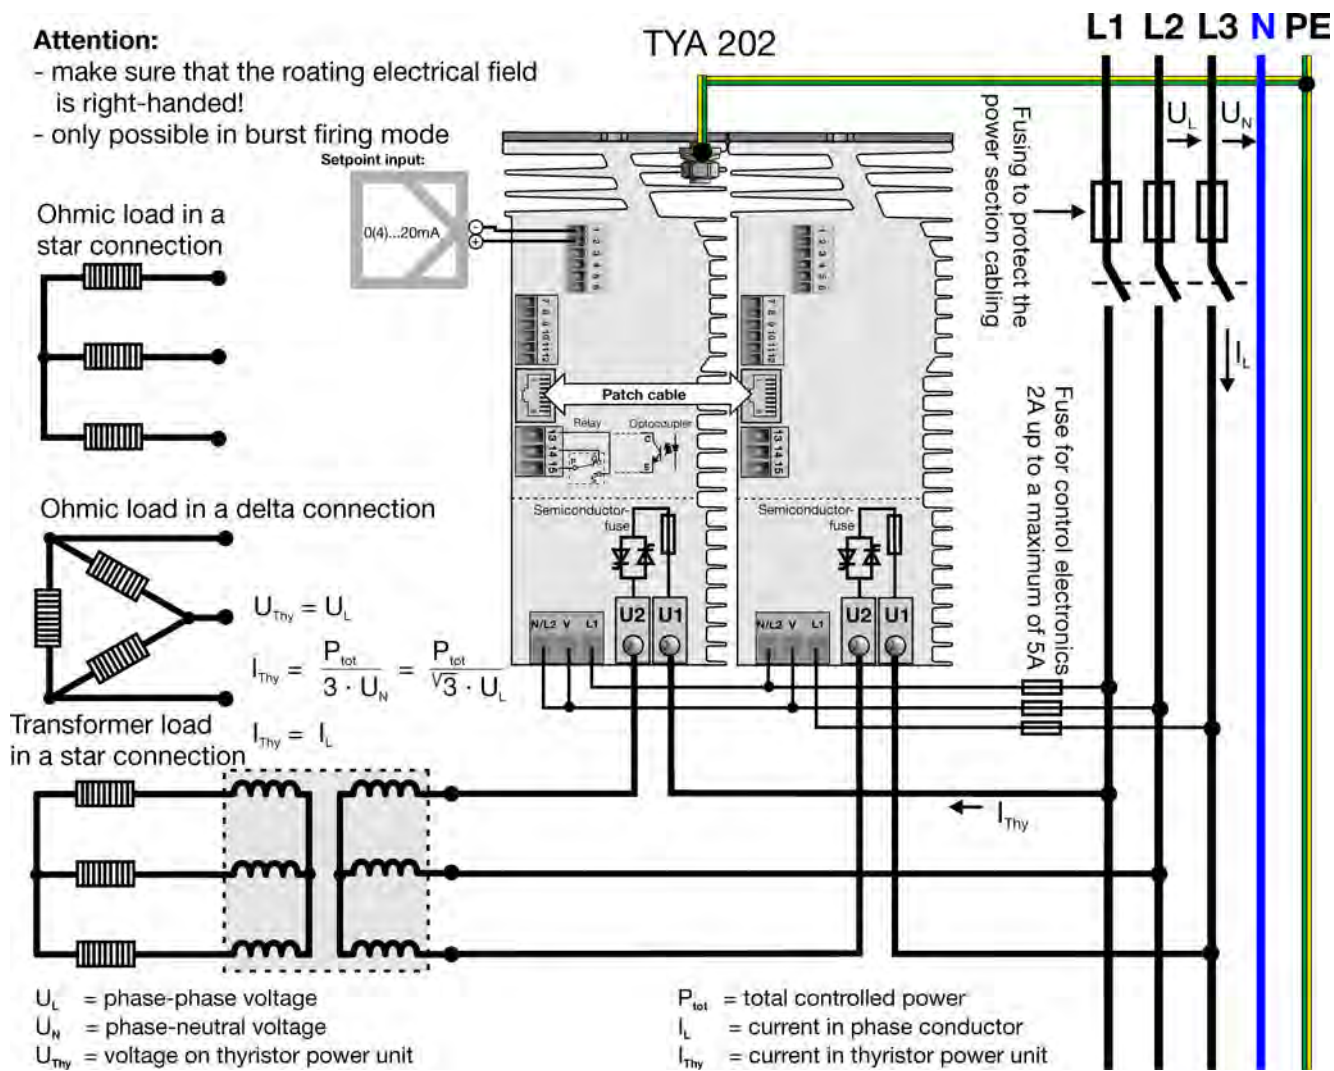

Note: In the case of power controllers with a load current of 250 A, the fan terminal X14 must also be supplied with the specified voltage!

⇒ Siehe "Example: Voltage supply of the fan in case of type 709062/X-0X-250-XXX-400-XX-25X" see page 14..

Order details

(1) Basic type

709062	TYA202 three-phase economy circuit power controller
--------	---

(2) Version

8	Standard, with factory settings
9	Customer-specific programming according to specifications

(3) national language of displaytext

01	deutsch (Factory setting)
02	englisch
03	französisch

(4) Load current^a

020	AC 20A
032	AC 32A
050	AC 50A
100	AC 100A
150	AC 150A
200	AC 200A
250	AC 250A

(5) subordinate control loop

100	U, U²
010	I, I² (can be set to U, U ²)
001	P (can be set to I, I ² or U, U ²)

(6) Load voltage^b

024	AC 24V	-20%...+15%,	45 ...63 Hz
042	AC 42V	-20%...+15%,	45 ...63 Hz
115	AC 115V	-20%...+15%,	45 ...63 Hz
230	AC 230V	-20%...+15%,	45 ...63 Hz
265	AC 265V	-20%...+15%,	45 ...63 Hz
400	AC 400V	-20%...+15%,	45 ...63 Hz
460	AC 460V	-20%...+15%,	45 ...63 Hz
500	AC 500V	-20%...+15%,	45 ...63 Hz

(7) interface

00	no
54	RS 485/422
64	PROFIBUS-DP

(8) Extra codes

252	Relay SPDT (changeover contact) 3A
257	Optocoupler

(1) / (2) - (3) - (4) - (5) - (6) - (7) - (8) **Order code**

709062 / 8 - 01 - 100 - 100 - 400 - 00 - 252 **Order example**

^a UL approval in preparation

^b Load voltage = voltage supply for control electronics

Important information:

Subordinate control loop U², code 100: voltage control

Subordinate control loop I², code 010: enables partial load failure detection, dual energy management, and current limiting

Subordinate control loop P, code 001: enables partial load failure detection, dual energy management, current limiting, free-running economy circuit, and R control

At a load current of 250 A, observe voltage supply for fan!

Scope of delivery

1 Operating Manual B70.9062.0
1 SCR power controller in the version ordered
1:1 Patch cable

Accessories

Part	Part no.
Setup program 70.9061 (TYA 201) and 70.9062 (TYA 202)	70/00544869
USB cable A-plug B-plug 3m	70/00506252
Mounting set for DIN rail installation:	
Type 70.9062/X-01-20...	70/00555172
Type 70.9062/X-01-32 and 70.9062/X-01-50	70/00555527

General accessories

Part	Load current $I_{nom.} = I_N$	Part no.
Super fast semi-conductor fuse 40A-AC690V	$I_N = 20A$	70/00513108
Super fast semi-conductor fuse 80A-AC690V	$I_N = 32A$	70/00068011
Super fast semi-conductor fuse 80A -AC690V	$I_N = 50A$	70/00068011
Super fast semi-conductor fuse 160A-AC690V	$I_N = 100A$	70/00081801
Super fast semi-conductor fuse 350A -AC690V	$I_N = 150A$	70/00083318
Super fast semi-conductor fuse 550A-AC690V	$I_N = 200A$	70/00083318
Super fast semi-conductor fuse 550A -AC690V	$I_N = 250A$	70/00083318

The top half of the page features a decorative background of a blue grid pattern. The grid consists of rounded rectangular cells that create a perspective effect, appearing to recede into the distance. The color of the grid transitions from a deep blue on the left to a lighter, almost white blue on the right. In the top right corner, the JUMO logo is displayed in a dark blue, bold, sans-serif font, enclosed within a white rounded rectangular border.

JUMO

По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72
Астана +7(7172)727-132
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41

Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

сайт: <http://jumo.nt-rt.ru> || эл. почта: jmu@nt-rt.ru